# GigaDevice Semiconductor Inc.

GD32330G-START

User Guide V2.0



## **Table of Contents**

Table of C	contents	1
List of Fig	gures	2
List of Ta	bles	3
1. Sumn	nary	4
2. Funct	ion Pin Assign	4
	ng started	
	vare layout overview	
	ower supply	
	oot option	
	ED	
	ΞΥ	
	D-Link	
	ktension	
4.7. M	CU	7
5. Routi	ne use guiden	7
5.1. GI	PIO_Runing_Led	7
5.1.1.	DEMO purpose	7
5.1.2.	DEMO running Result	8
5.2. GI	PIO_Key_Polling_mode	8
5.2.1.	DEMO purpose	8
5.2.2.	DEMO running Result	8
5.3. GI	PIO_Key_Interrupt_mode	8
5.3.1.	DEMO purpose	
5.3.2.	DEMO running Result	8
6 Povis	ion history	10



# **List of Figures**

Figure 4-1 Schematic diagram of power supply	5
Figure 4-2 Schematic diagram of boot option	
Figure 4-3 Schematic diagram of LED function	
Figure 4-4 Schematic diagram of Key function	
Figure 4-5 Schematic diagram of GD-Link function	
Figure 4-6 Schematic diagram of Extension Pin	
Figure 4-7 Schematic diagram of MCU Pin	7



## **List of Tables**

Table 2-1 Pin assignment	4
Table 4-1 Boot configuration	
Table 6-1 Revision history	10

**USBCTR** 



## 1. Summary

GD32330G-START board uses GD32F330G8 as the main controller. As a complete development platform of GD32F3x0 powered by ARM® Cortex™-M4 core, the board supports full range of peripherals. It uses mini-USB interface to supply 5V power. SWD, Reset, Boot, User button key, LED and Extension Pin are also included. This document details its hardware schematic and the relevant applications.

## 2. Function Pin Assign

**Function** Pin **Description** LED PA1 LED1 PA0 **KEY** K1-User Key RESET K2-Reset USBDM PA11 **USB** PA12 **USBDP** 

PA8

Table 2-1 Pin assignment

## 3. Getting started

The START Board uses mini-USB connecter to get power, the hardware system power is +3.3V. A mini-USB cable are necessary to down programs. Select the correct boot mode and then power on, the LED3 will turn on, which indicates the power supply is ready.

There are Keil version and IAR version of all projects. Keil version of the projects are created based on Keil MDK-ARM 4.74 uVision4. IAR version of the projects are created based on IAR Embedded Workbench for ARM 7.40.2. During use, the following points should be noted:

- 1. If you use Keil uVision4 to open the project, install the GD32F3x0\_AddOn.2.0.0.exe to load the associated files.
- 2. If you use Keil uVision5 to open the project, there are two ways to solve the "Device Missing (s)" problem. One is to install GigaDevice.GD32F3x0\_DFP.2.0.0.pack. In Project menu, select the Manage sub menu, click on the "Version Migrate 5 Format..." menu, the Keil uVision4 project will be converted to Keil uVision5 project. Then add "C:\Keil\_v5\ARM\Pack \ARM\CMSIS\4.2.0\CMSIS\Include" to C/C++ in Option for Target. The other is to install Addon directly. Select the installation directory of Keil uVision5 software, such as C:\Keil\_v5, in Destination Folder of Folder Selection. Select the corresponding device in Device of Option for Target and add "C:\Keil\_v5\ARM\Pack\ARM\CMSIS\4.2.0 \CMSIS\Include" to C/C++ in Option for Target.
- 3. If you use IAR to open the project, install IAR\_GD32F3x0\_ADDON.2.0.0.exe to load the




associated files.

## 4. Hardware layout overview


## 4.1. Power supply

Figure 4-1 Schematic diagram of power supply

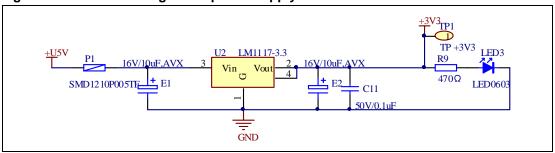

## 4.2. Boot option

 Figure 4-2 Schematic diagram of boot option

 


**Table 4-1 Boot configuration** 

BOOT1	воото	Boot Mode
Default	2-3	User memory
Delault	1-2	System memory
Changed by ISP	1-2	SRAM memory

#### 4.3. LED


Figure 4-3 Schematic diagram of LED function






#### 4.4. **KEY**

Figure 4-4 Schematic diagram of Key function

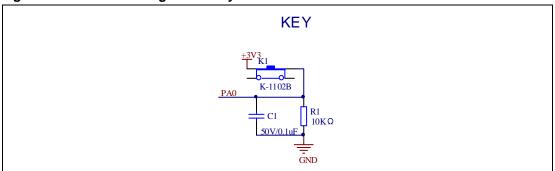

#### 4.5. GD-Link


Figure 4-5 Schematic diagram of GD-Link function

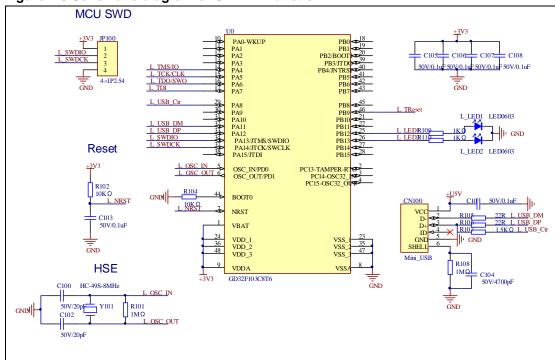




#### 4.6. Extension

Figure 4-6 Schematic diagram of Extension Pin

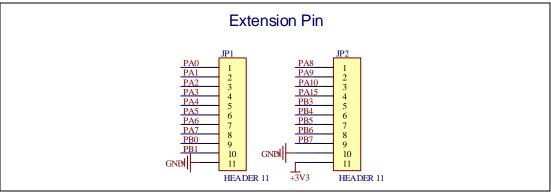

#### 4.7. MCU

Figure 4-7 Schematic diagram of MCU Pin

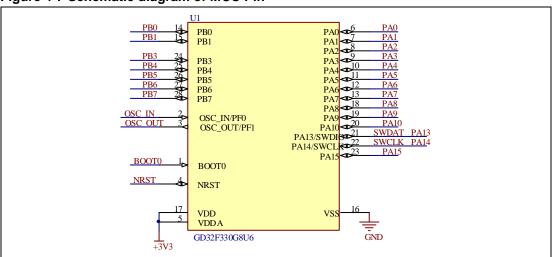

## 5. Routine use guide

## 5.1. **GPIO\_Runing\_Led**

#### 5.1.1. DEMO purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO for controlling the LED
- Learn to use SysTick to generate 1ms delay

GD32330G-START board has one LED. The LED1 is controlled by GPIO. This demo will show how to light the LED.



#### 5.1.2. DEMO running Result

Download the program <01\_GPIO\_Runing\_Led> to the board, the state of LED1 is toggled every 1s.

#### 5.2. **GPIO\_Key\_Polling\_mode**

#### 5.2.1. DEMO purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO control the LED and the KEY
- Learn to use SysTick to generate 1ms delay

GD32330G-START board has two keys and one LED. The two keys are Reset key and User key. The LED1 is controlled by GPIO.

This demo will show how to use the User key to control the LED1. When press down the User Key, it will check the input value of the IO port. If the value is 1, wait for 50ms. Then check the input value of the IO port again. If the value is still 1, indicates that the button is pressed down successfully, and light the four LED1.

#### 5.2.2. DEMO running Result

Download the program <02\_GPIO\_Key\_Polling\_mode> to the board, first of all, all the LEDs will be flashed once for test. Then press down the User Key, LED1 will be turned on. Press down the User Key again, LED1 will be turned off.

## 5.3. **GPIO\_Key\_Interrupt\_mode**

#### 5.3.1. DEMO purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO to control the LED and the KEY
- Learn to use EXTI to generate external interrupt

GD32330G-START board has two keys and one LED. The two keys are Reset key and User key. The LED1 is controlled by GPIO.

This demo will show how to use EXTI interrupt line to control the LED1. When press down the User Key, it will produce an interrupt. In the interrupt service function, the demo will toggle LED1.

#### 5.3.2. DEMO running Result

Download the program <03\_GPIO\_Key\_Interrupt\_mode> to the board, first of all, all the LEDs will be flashed once for test. Then press down the User Key, LED1 will be turned on.



Press down the User Key again, LED1 will be turned off.



## 6. Revision history

Table 6-1 Revision history

Revision No.	Description	Date
1.0	Initial Release	Jun.28, 2017
2.0	Updated format across the whole document	Jun.1, 2019



#### **Important Notice**

This document is the property of GigaDevice Semiconductor Inc. and its subsidiaries (the "Company"). This document, including any product of the Company described in this document (the "Product"), is owned by the Company under the intellectual property laws and treaties of the People's Republic of China and other jurisdictions worldwide. The Company reserves all rights under such laws and treaties and does not grant any license under its patents, copyrights, trademarks, or other intellectual property rights. The names and brands of third party referred thereto (if any) are the property of their respective owner and referred to for identification purposes only.

The Company makes no warranty of any kind, express or implied, with regard to this document or any Product, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The Company does not assume any liability arising out of the application or use of any Product described in this document. Any information provided in this document is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Except for customized products which has been expressly identified in the applicable agreement, the Products are designed, developed, and/or manufactured for ordinary business, industrial, personal, and/or household applications only. The Products are not designed, intended, or authorized for use as components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, atomic energy control instruments, combustion control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or Product could cause personal injury, death, property or environmental damage ("Unintended Uses"). Customers shall take any and all actions to ensure using and selling the Products in accordance with the applicable laws and regulations. The Company is not liable, in whole or in part, and customers shall and hereby do release the Company as well as it's suppliers and/or distributors from any claim, damage, or other liability arising from or related to all Unintended Uses of the Products. Customers shall indemnify and hold the Company as well as it's suppliers and/or distributors harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of the Products.

Information in this document is provided solely in connection with the Products. The Company reserves the right to make changes, corrections, modifications or improvements to this document and Products and services described herein at any time, without notice.

© 2019 GigaDevice – All rights reserved